

# NÁVOD / INSTRUCTION


## Flyer stand Fortuna / Nostalgik



1. Package content of the Nostalgik stand.




2. Package content of the Fortuna stand.

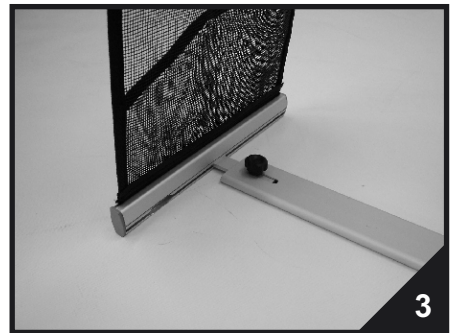

3. Insert supporting leg into the bottom profile and tighten it just next to the profile.



4. Insert telescopic pole into the supporting leg.

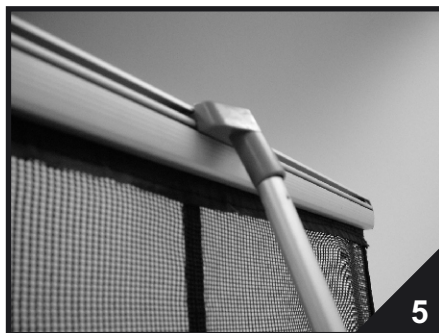

5. Support the upper profile with the supporting pole.



6. Twist the telescopic pole to the left and stretch out the stand. The telescopic pole will be fastened by twisting it to the right.