

# NÁVOD / INSTRUCTION


## Customer stopper Tornado



1. Insert clipframe with springs into the base unit.




2. Attach the clipframe with springs to the bottom part of base unit with attached screws and bearings.

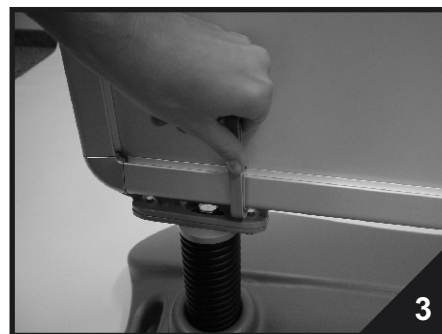

3. Frame can be lift off easily with a special key that is part of the package.



4. Insert theme under the protective foil.

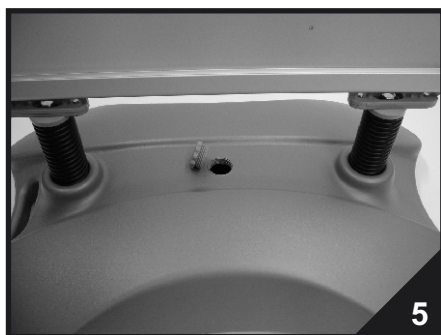

6. Fill the base unit with water. There are casters installed for easy manipulation with the stopper – just lift up one side and use casters to move the stopper.